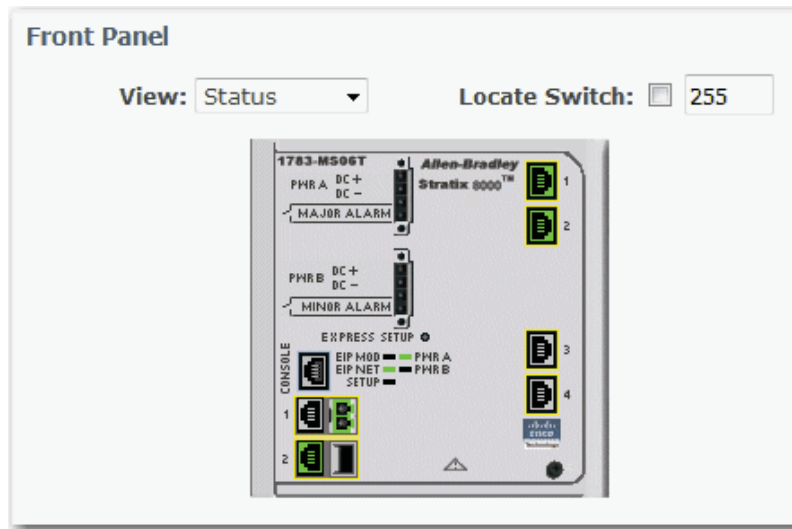


Stratix 8000/8300 Front Panel**Table 111 - Stratix 8000/8300 System Status Indicators**

Indicator	Status	Description	
EIP Mod		The EIP Mod status indicator shows the status of the switch.	
	Off	Power to the switch is off or is not properly connected.	
	Solid green	The switch is operating properly.	
	Flashing green	The switch is not configured. For example, the switch does not have an IP address configured.	
	Flashing red	The switch has detected a recoverable system fault. Use the system log to see more details about the problem. See System Log Messages on page 309 .	
	Solid red	The switch has detected a nonrecoverable system. Use the system log to see more details about the problem. See System Log Messages on page 309 .	
EIP Net	Flashing green and red	The switch is running its power-on self-test (POST).	
		The EIP Net status indicator shows the network status of the switch.	
	Off	Power to the switch is off or is not properly connected.	
	Solid green	The switch has an established CIP connection to one or more attached devices.	
	Flashing green	The switch has an IP address but the switch does not have an established connection to one or more attached devices.	
	Flashing red	One or more connections to attached devices have timed out.	
Setup	Solid red	The switch has detected that its IP address is already in use by another device in the network.	
	Flashing green and red	The switch is running its power-on self-test (POST).	
		The Setup status indicator shows the status of the initial setup of the switch.	
		The behavior of the Setup status indicator varies depending on whether you run single-mode or multi-mode Express Setup. In multi-mode Express Setup, the behavior varies based on whether you run Short Press, Medium Press, or Long Press mode. For details about the Setup status indicator behavior during Express Setup, refer to Chapter 2, Get Started .	
	Pwr A and Pwr B		The Pwr status indicators show the DC power status.
		Off	Power to the switch is off or is not properly connected.
Solid green		Power is present.	
	Solid red	Power to the switch is not present and the power alarm is on.	