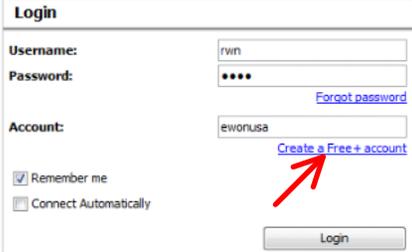
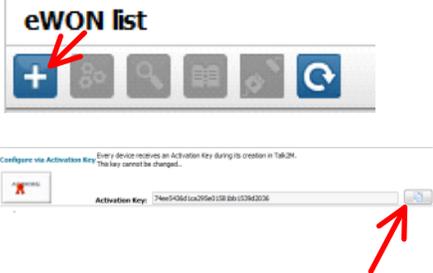
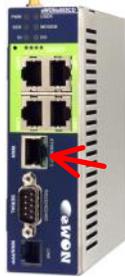
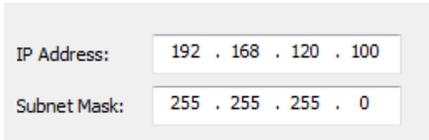
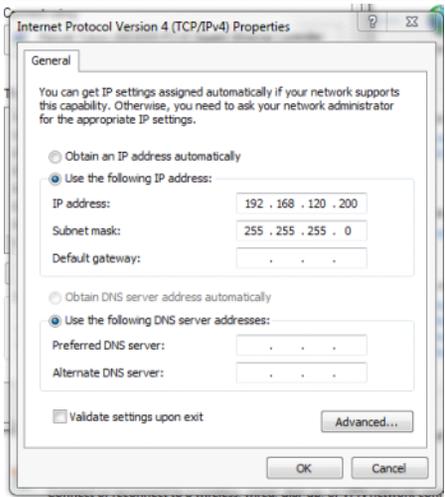
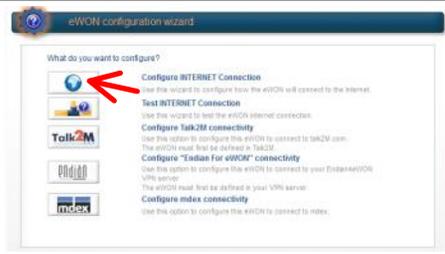
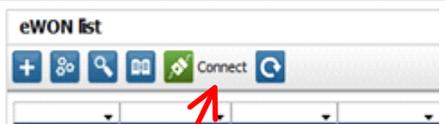


Step	Action	Illustration									
1.	<p>Download and Install eCatcher and eBuddy onto your Windows PC</p> <p>http://www.ewon.us/us/Support/software-download.html</p> <p><i>Note: On Windows 7 Right click the eCatcher installation file and run as administrator.</i></p>	 <table border="1"> <thead> <tr> <th>Description</th> <th>File</th> <th>Revision</th> </tr> </thead> <tbody> <tr> <td> eBuddy 2 Free eWON add-on tool to easily <ul style="list-style-type: none"> set up eWON IP address upload eWON firmware upgrades backup/restore data and configurations Requirements: <ul style="list-style-type: none"> Windows 2000, XP, Vista or 7 - 64 bits </td> <td>eBuddySetup.exe</td> <td>release note</td> </tr> <tr> <td> eCatcher 3 Easy, secure, Internet remote access with Talk2M. For Free+ and Pro services Requirements: <ul style="list-style-type: none"> XP, Vista or 7 - 64 bits </td> <td>ecatcherSetup.exe</td> <td>release note</td> </tr> </tbody> </table>	Description	File	Revision	eBuddy 2 Free eWON add-on tool to easily <ul style="list-style-type: none"> set up eWON IP address upload eWON firmware upgrades backup/restore data and configurations Requirements: <ul style="list-style-type: none"> Windows 2000, XP, Vista or 7 - 64 bits 	eBuddySetup.exe	release note	eCatcher 3 Easy, secure, Internet remote access with Talk2M. For Free+ and Pro services Requirements: <ul style="list-style-type: none"> XP, Vista or 7 - 64 bits 	ecatcherSetup.exe	release note
Description	File	Revision									
eBuddy 2 Free eWON add-on tool to easily <ul style="list-style-type: none"> set up eWON IP address upload eWON firmware upgrades backup/restore data and configurations Requirements: <ul style="list-style-type: none"> Windows 2000, XP, Vista or 7 - 64 bits 	eBuddySetup.exe	release note									
eCatcher 3 Easy, secure, Internet remote access with Talk2M. For Free+ and Pro services Requirements: <ul style="list-style-type: none"> XP, Vista or 7 - 64 bits 	ecatcherSetup.exe	release note									
2.	<p>Launch eCatcher and Click "Create Free+ Account". Follow the wizard to create your account.</p>										
3.	<p>Click the "+" button to add a new device.</p> <p>Follow wizard and copy the "Activation Key" to your clipboard.</p>										
4.	<p>Connect an ethernet Cable from your computer to one of the eWON's 4 LAN ports.</p> <p><i>Note: Straight-through or cross-over cable will work</i></p>										
5.	<p>Connect an Ethernet Cable from your network to the WAN port so the COSY is able to reach the internet.</p>										
6.	<p>Launch eBuddy and select "Set IP Address" to set the LAN side IP Address.</p>	<p>Serial Number: 1203-0060-59</p>									

	<p>Note: Use an IP address that won't conflict with the WAN or remote computers IP address. More information can found here: http://wiki.ewon.biz/COSY/0_Set_eWON_Machine_LAN_IP_address</p>	
7.	Set the IP address of your computer to the same subnet as the eWON's LAN IP.	
8.	<p>Launch your internet browser and type the eWON's LAN IP address into the address bar.</p> <p>Note: Default username is "adm" and password is "adm".</p>	
9.	Click on the "Configuration" tab in the EWON's setup screen in the upper right hand corner.	
10.	Click on the "Wizards" button in the upper right hand corner .	
11.	Click on the "Configure INTERNET Connection" wizard. Follow the wizard to configure how the eWON will get it's internet connectivity.	
12.	Click the "Configure Talk2M Connectivity" wizard. This is where you will need to paste the "Activation Key" that you copied to your clipboard earlier.	
13.	Unplug the ethernet cable and set the IP address of your computer back to the original settings.	
14.	Launch eCatcher and the status of your device should show online. Highlight your device and click "Connect".	

online.

Highlight your device and click "Connect".

Note: Once connected you should be able to ping the IP addresses of the devices plugged into the COSY's LAN ports.



For support please contact your local distributor.